

4-in-1 MPEG-2/H.264 HD Encoder User Manual

SW Version: 1.16sa

HW version: 0.3

Web NMS version: 1.14

About This Manual

Intended Audience

This user manual has been written to help people who have to use, to integrate and to install the product. Some chapters require some prerequisite knowledge in electronics and especially in broadcast technologies and standards.

Disclaimer

No part of this document may be reproduced in any form without the written permission of the copyright owner.

The contents of this document are subject to revision without notice due to continued progress in methodology, design and manufacturing. We shall have no liability for any error or damage of any kind resulting from the use of this document.

Copy Warning

This document includes some confidential information. Its usage is limited to the owners of the product that it is relevant to. It cannot be copied, modified, or translated in another language without prior written authorization from our company.

Directory

CHAPTER 1 INTRODUCTION	1
1.1 PRODUCT OVERVIEW	1
1.2 KEY FEATURES	1
1.3 SPECIFICATIONS	2
1.4 PRINCIPLE CHART	3
1.5 APPEARANCE AND DESCRIPTION	3
CHAPTER 2 INSTALLATION GUIDE	5
2.1 GENERAL PRECAUTIONS	5
2.2 POWER PRECAUTIONS	5
2.3 DEVICE'S INSTALLATION FLOW CHART ILLUSTRATED AS FOLLOWING	5
2.4 ENVIRONMENT REQUIREMENT	5
2.5 GROUNDING REQUIREMENT	6
CHAPTER 3 OPERATION	7
3.1 LCD MENU CLASS TREE	7
3.2 INITIAL STATUS	8
3.3 GENERAL SETTINGS FOR MAIN MENU	8
CHAPTER 4 WEB NMS OPERATION	17
4.1 LOGIN	17
4.2 OPERATION	18
CHAPTER 5 TROUBLESHOOTING	26
CHAPTER 6 PACKING LIST	27

Chapter 1 Introduction

1.1 Product Overview

This encoder is our new professional HD audio & video encoding device with powerful functionality. It has equipped with 4 HD-SDI channels input supporting MPEG-2 and MPEG-4 AVC/H.264 video encoding and MPEG-1 Audio layer 2, LC-AAC, HE-AAC and AC3 audio encoding. The 4 encoded SDI programs will output through ASI and IP ports in MPTS or SPTS.

It adopts inner drawer-type structural design which greatly facilitates the change of encoding modules if needed.

We apply dual power supplies with one for backup to provide a better protection for your business.

1.2 Key Features

- **Dual power supply**
- **MPEG2 HD/SD & MPEG4 AVC/H.264 HD/SD video encoding**
- **MPEG1 Audio Layer 2, LC-AAC, HE-AAC and AC3 audio encoding**
- **4*HD-SDI input**
- **Support VBR/CBR rate control mode**
- **Support CC (closed caption) EIA 608 & EIA 708**
- **Support Low Latency function**
- **Support PSI/SI editing and inserting**
- **Supports IP null packet filter**
- **ASI output, IP (MPTS & 4 SPTS) output over UDP, RTP**
- **LCD display, Remote control and firmware**
- **Web-based NMS management; Updates via web**

1.3 Specifications

Encoding Section

Video

Encoding	MPEG2 & MPEG4 AVC/H.264
Input	HD-SDI*4
Resolution	1920*1080_60P, 1920*1080_50P, (-for MPEG4 AVC/H.264 only) 1920*1080_60i, 1920*1080_50i, 1280*720_60p, 1280*720_50P 720*480_60i, 720*576_50i
Bit Rate	0.5~19.5Mbps for H.264 encoding 1~19.5Mbps for MPEG-2 encoding
Rate Control Mode	CBR/VBR

Audio

encoding	MPEG1 Layer II, MPEG2-AAC, MPEG4-AAC, AC3
Sample rate	48KHz
Bit rate	64kbps, 96kbps, 128kbps, 192kbps, 256kbps, 320kbps


System

Local interface	LCD + control buttons
Remote management	Web NMS
Low Latency Mode	Normal, mode 1, mode 2
output	2*ASI out (BNC type); IP (1 MPTS & 4 SPTS) over UDP, RTP (RJ45, 100M)
NMS interface	RJ45, 100M
Language	English

General

Power supply	AC 100V~240V
Power Consumption	45W
Dimensions	482*400*44mm
Weight	4.5 kgs
Operation temperature	0~45°C

1.4 Principle Chart

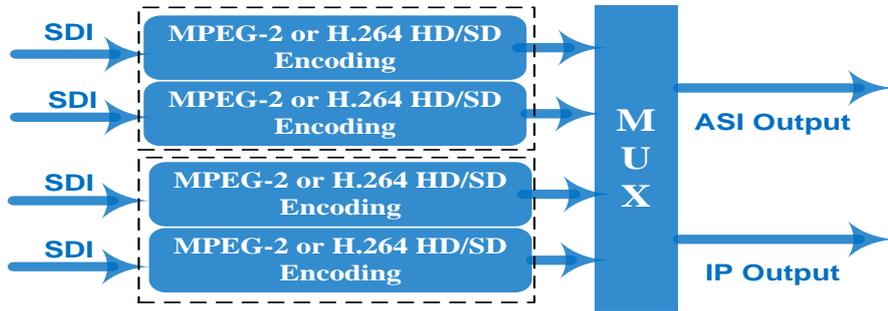


1.5 Appearance and Description

Front Panel Illustration



- ① LCD window
- ② Power supply indicators
- ③ Power Alarm Switch: When only one power supply is connected or one of the power supplies fails, the device will give alarm sound, and then press the alarm switch to turn off the alarm sound.
- ④ NMS port for the connection between the device and PC
- ⑤ DATA port for IP signal out
- ⑥ Indicators for whole unit power supply, working alarm and input signal lock status
- ⑦ Control Buttons
- ⑧ Handles

Rear Panel Illustration

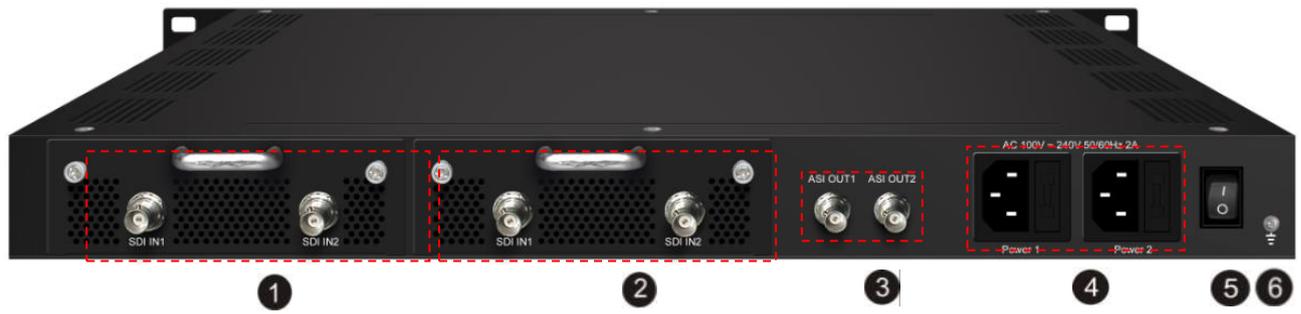

- ① SDI Input Module 1: Program input port 1&2
- ② SDI Input Module 2: Program input port 3&4
- ③ ASI output ports
- ④ Power Supply Slot
- ⑤ Power Switch
- ⑥ Grounding

Chapter 2 Installation Guide

This section is to explain the cautions the users must know in some case that possible injure may bring to users when it's used or installed. For this reason, please read all details here and make in mind before installing or using the product.


2.1 General Precautions

- ✓ Must be operated and maintained free of dust or dirty.
- ✓ The cover should be securely fastened, do not open the cover of the products when the power is on.
- ✓ After use, securely stow away all loose cables, external antenna, and others.

2.2 Power precautions

- ✓ When you connect the power source, make sure if it may cause overload.
- ✓ Avoid operating on a wet floor in the open. Make sure the extension cable is in good condition
- ✓ Make sure the power switch is off before you start to install the device

2.3 Device's Installation Flow Chart Illustrated as following

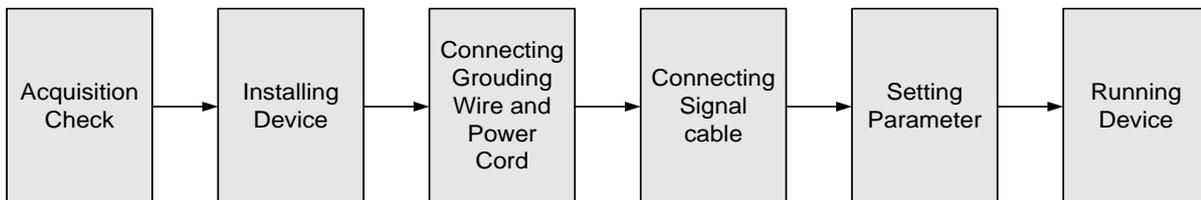

2.4 Environment Requirement

Item	Requirement
Machine Hall Space	When user installs machine frame array in one machine hall, the distance between 2 rows of machine frames should be


	1.2~1.5m and the distance against wall should be no less than 0.8m.
Machine Hall Floor	Electric Isolation, Dust Free Volume resistivity of ground anti-static material: $1 \times 10^7 \sim 1 \times 10^{10} \Omega$, Grounding current limiting resistance: $1 M\Omega$ (Floor bearing should be greater than 450Kg/m^2)
Environment Temperature	$5 \sim 40^\circ \text{C}$ (sustainable), $0 \sim 45^\circ \text{C}$ (short time), installing air-conditioning is recommended
Relative Humidity	20%~80% sustainable 10%~90% short time
Pressure	86~105KPa
Door & Window	Installing rubber strip for sealing door-gaps and dual level glasses for window
Wall	It can be covered with wallpaper, or brightness less paint.
Fire Protection	Fire alarm system and extinguisher
Power	Requiring device power, air-conditioning power and lighting power are independent to each other. Device power requires AC $110\text{V} \pm 10\%$, 50/60Hz or AC $220\text{V} \pm 10\%$, 50/60Hz. Please carefully check before running.

2.5 Grounding Requirement

- ✓ All function modules' good grounding is the basis of reliability and stability of devices. Also, they are the most important guarantee of lightning arresting and interference rejection. Therefore, the system must follow this rule.
- ✓ Grounding conductor must adopt copper conductor in order to reduce high frequency impedance, and the grounding wire must be as thick and short as possible.
- ✓ Users should make sure the 2 ends of grounding wire well electric conducted and be antirust.
- ✓ It is prohibited to use any other device as part of grounding electric circuit
- ✓ The area of the conduction between grounding wire and device's frame should be no less than 25 mm^2 .


Chapter 3 Operation

3.1 LCD Menu Class Tree

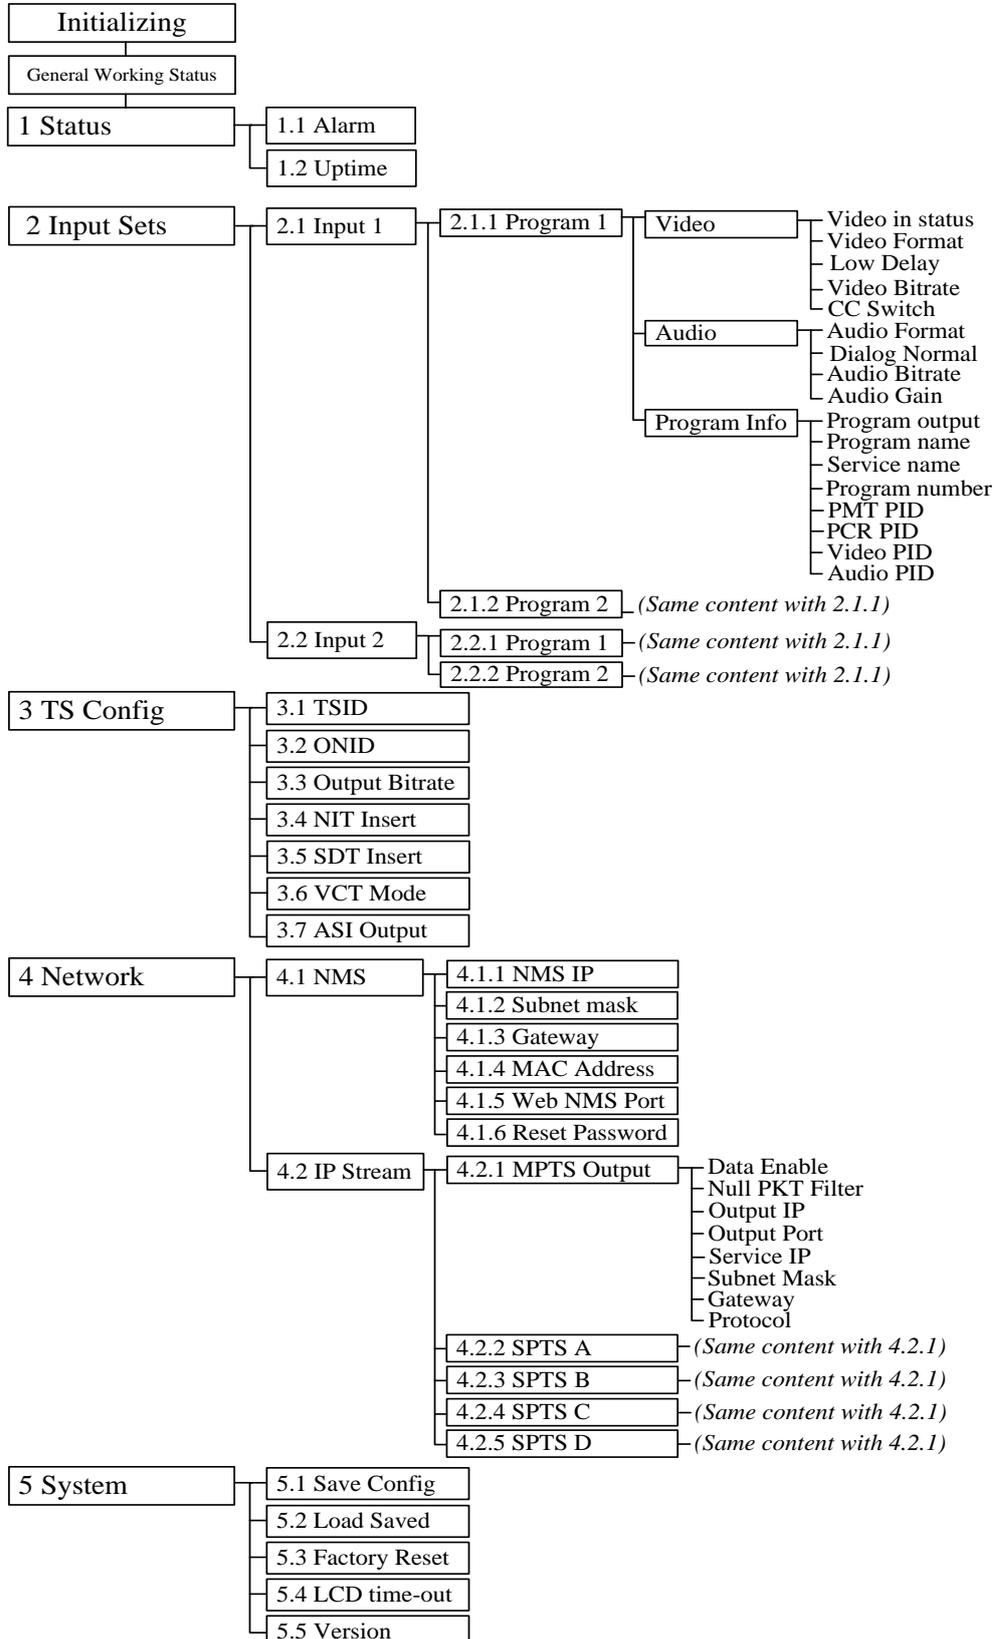

3.2 Initial Status


Switch on the device and after a few seconds' initialization, it presents start-up pictures as below:

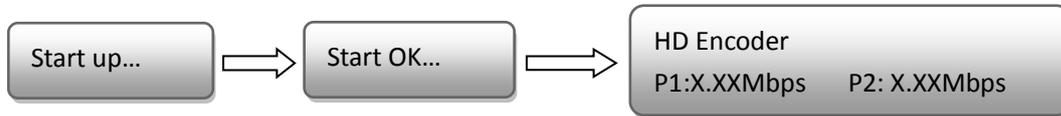

- **P1:** Program 1; **P2:** Program 2; **P3:** Program 3; **P4:** Program 4
- **X.XX Mbps:** indicate the current encoding bit rate of the corresponding channel.

3.3 General Settings for Main Menu

Press LOCK key on the front panel to enter the main menu. The LCD will display the following pages where user can configure the parameters for the device.

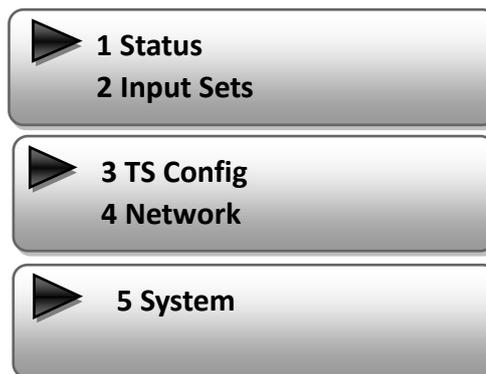

User can press UP/DOWN buttons to specify one item and then press ENTER to enter its submenus. Press MENU to step back to upper level menu.

1) Status



➤ Alarm

The alarm indicator will turn on if there is no A/V signals inputting or outputting bit rate overflows. User then can enter this menu to check the error type.

➤ Uptime

It displays the working time duration of the device. It times upon power on.


Uptime
0 Day(s) xx-xx-xx

2) Input Sets

Under this submenu, the LCD will show “2.1 Input 1” and “2.2 Input 2” to represent the two SDI-input modules respectively.

▶ **2.1 Input 1**
▶ **2.2 Input 2**

Each SDI input module support two program input connectors. Under submenus 2.1 (or 2.2), user could set the video/audio parameters for the 2 SDI programs respectively.

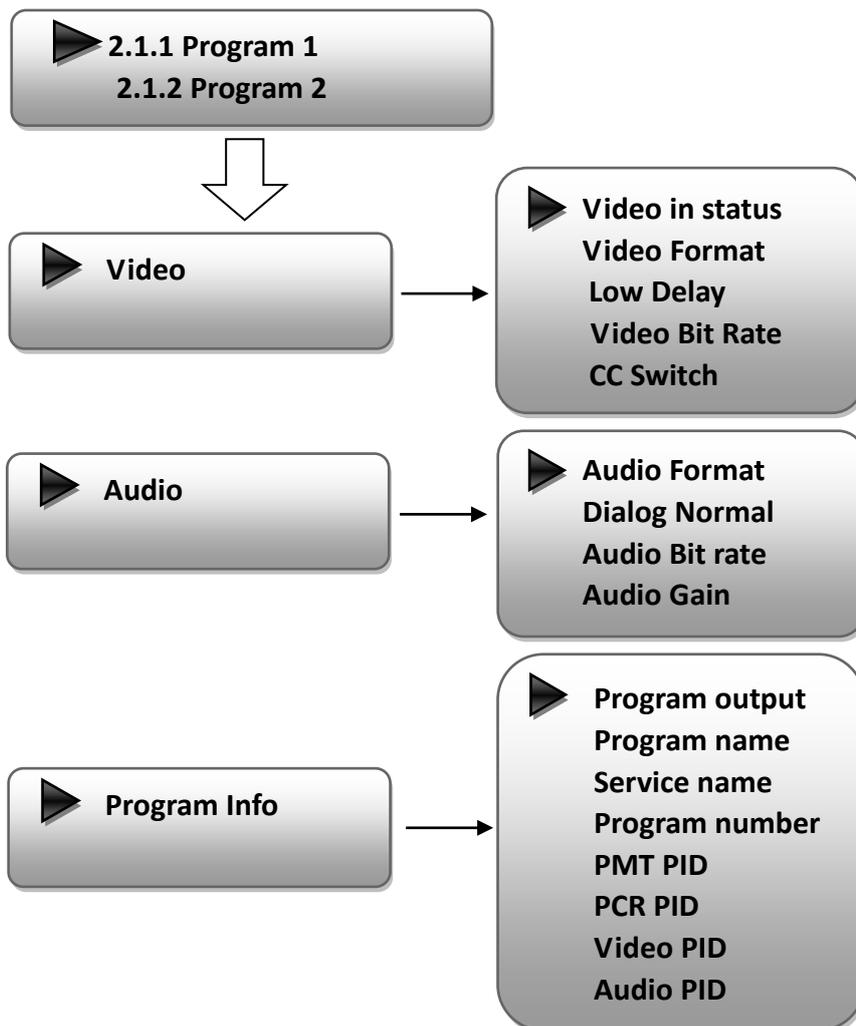


➤ Video in Status

Users can enter this menu to check the video input status.

➤ Video Format

The SDI encoding module supports both “MPEG2” and “H.264” video encoding formats. Users can enter this menu to select one format from the 2 options.

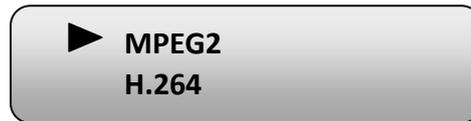

Press ENTER to shift ‘*’ to ‘▶’, and then press UP/DOWN buttons to specify one item and then press ENTER to confirm. Press MENU to step back to upper level menu. (The operation method is applicable for rest part.)

➤ Low Delay

This unit can achieve a low time delay from encoding to decoding terminal end-to-end.



NOTE


The different combination of **Video Format**, **Video Bit-rate**, **Low Delay Mode**, the **Resolution** of signal source and **Decoding solution** adopted on terminal side will have an impact on the latency.

➤ Video Bit Rate

Users can set the video encoding bit rate manually in this menu.

0.5~19.5Mbps for H.264 encoding

1~19.5Mbps for MPEG-2 encoding

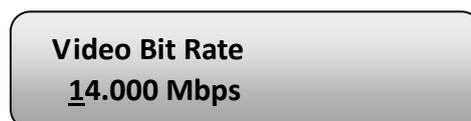

➤ CC Switch

CC refers to Closed Caption.

Users can select a standard for the CC from the 2 options in this menu.



▶ EIA 608
EIA 708

➤ Audio Format

The SDI encoding module supports 4 encoding formats. Users can enter this menu to select one format from the 4 options.




▶ MPEG1 Layer 2
MPEG2 AAC



▶ MPEG4 AAC
AC3

➤ Dialog Normal

The Dialog Normalization ranges from -31 to -1dB. User can set Dialog Normalization here. It is only settable when the Audio format is AC3.

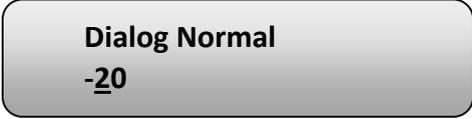

Dialog Normal
-20

➤ Audio Bit Rate

The audio bit rate ranges from 64Kbps to 320Kbps. Users can select one bit-rate from the options provided.



Audio Bitrate
▶ 64Kbps

➤ Audio Gain

Users can adjust the audio gain in this menu.



Audio Gain
100 %

➤ Program Info

Users can enable or disable the program output in the first sub-menu and configure the other parameters in the rest sub-menus.

Program Output
▶ Enable

Program Name
TV-101

Service Name
TV-Provider

Program number
0x101

PMT PID
0x101

PCR PID
0x100

Video PID
0x100

Audio PID
0x100

3) TS Config

This encoder support TS output via ASI ports. 'TS Config' is for the configuration of ASI output. Its submenus contain:

▶ **3.1 TS ID**
3.2 ON ID

▶ **3.3 Output Bit rate**
3.4 NIT Insert

▶ **3.5 SDT Insert**
3.6 VCT Mode

▶ **3.7 ASI Output**

Users can set the TS ID and Original Network ID in the 2 submenus. The IDs are in hexadecimal form.

TS ID
0x0001

ON ID
0x0001

➤ **Output Bit rate**

Users can set the max output bit rate for the ASI MPTS out. (Range 0-100 Mbps)

Output Bit rate
60.000 Mbps

➤ **NIT Insert**

Users can insert your NIT with operations in the menu.

NIT Insert
▶ Yes No

➤ **SDT Insert**

Users can insert your SDT with operations in the menu.

SDT Insert
▶ Yes No

➤ **VCT Mode**

Users can choose VCT Mode under this menu. There are three options: TVCT, CVCT, and Close VCT.

VCT Mode
▶ TVCT

➤ **ASI Output**

Users can copy a stream from the IP out streams (1 MPTS & 8 SPTS) to output

through ASI.





4) Net Work

'Net work' is divided into 2 parts: NMS and IP Stream.




➤ NMS

Submenus under 'NMS' are for setting the parameters related to the device connection in the network.

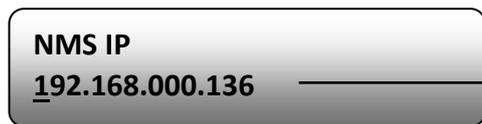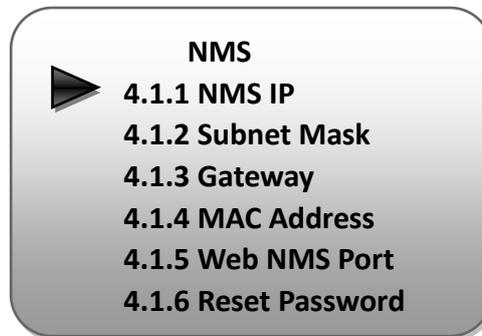


The IP address for connecting the device to PC

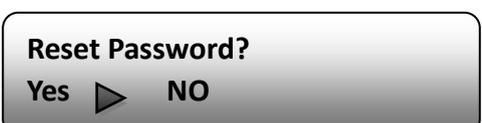


➤ IP Stream

Submenus under 'IP Stream' are for setting the output IP stream in MPTS or SPTS.

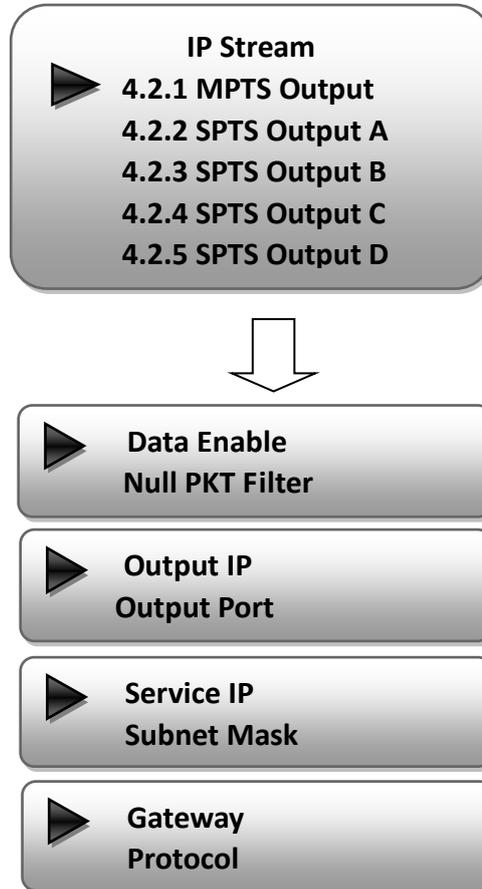


5) System

Users can set the system parameters in this menu. Enter 'System' submenus to separately set corresponding parameters.

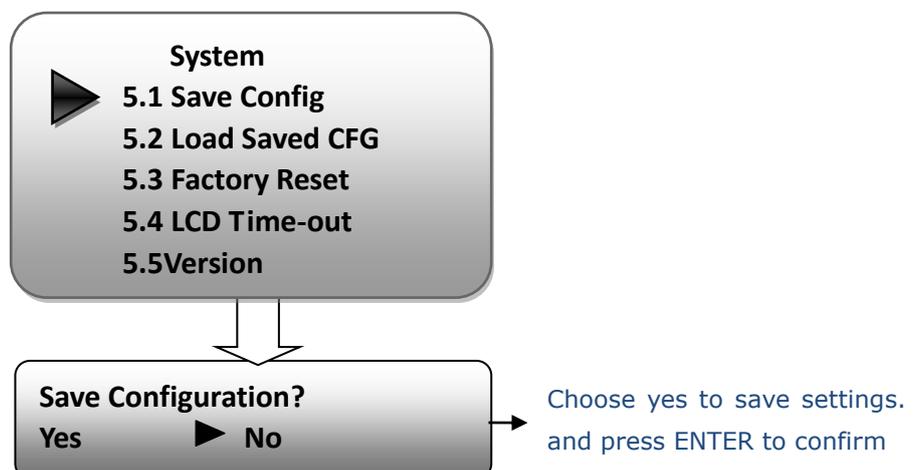

Choose yes to restore the device into the last saved configuration.

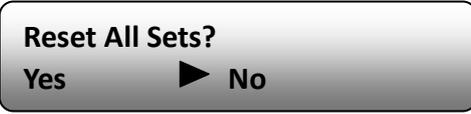

Choose yes to restore the device into factory's default configuration.

Press DOWN/UP key to select a time out for the LCD lighting duration (5-120 seconds)



It displays the device name and software/hardware version information.

Chapter 4 WEB NMS Operation

User not only can use front buttons to set configuration, but also can control and set the configuration in computer by connecting the device to web NMS Port. User should ensure that the computer's IP address is different from the encoder's IP address; otherwise, it would cause IP conflict.

4.1 login

The default IP address of this device is 192.168.0.136. (We can modify the IP through the front panel.)

Connect the PC (Personal Computer) and the device with net cable, and use ping command to confirm they are on the same network segment.

I.G. the PC IP address is 192.168.99.252, we then change the device IP to 192.168.99.xxx (xxx can be 1 to 254 except 252 to avoid IP conflict).

Use web browser to connect the device with PC by inputting the Encoder & Modulator's IP address in the browser's address bar and press Enter.

It will display the Login interface as Figure-1. Input the Username and Password (Both the default Username and Password are "admin".) and then click "LOGIN" to start the device setting.

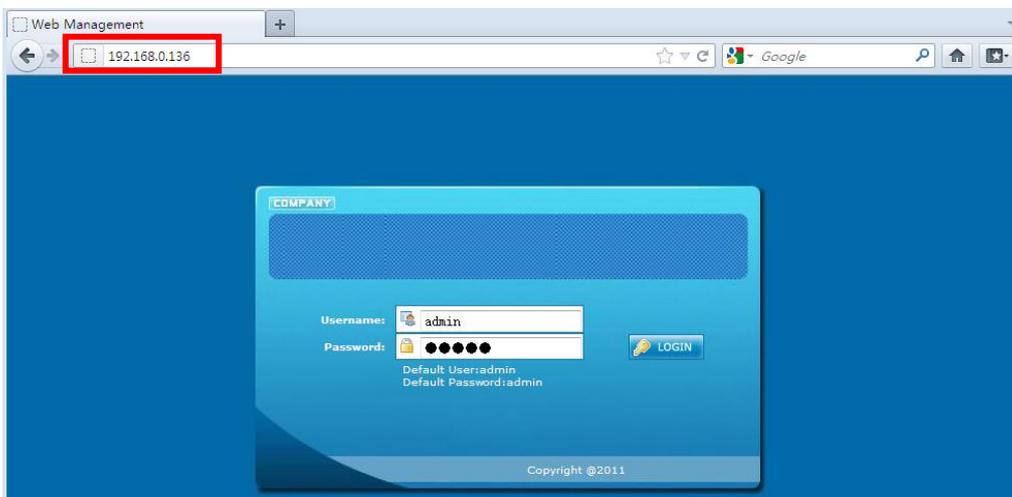


Figure-1

4.2 Operation

When we confirm the login, it displays the WELCOME interface as Figure-2.

The screenshot shows the 'Web Management' interface for a '4 In 1 HD Encoder'. The top navigation bar includes 'Web Management' and 'Logout Exit'. The left sidebar menu is expanded to show options like 'Welcome', 'Parameter', 'System', etc. The main content area displays 'Version Information' and 'Status Information'. The 'Status Information' section includes a table for 'Input' and 'Output' data. A green circle next to 'TS Overflow' is highlighted with a callout.

Version Information	
Software Version:	1.16sa Build 134 Aug 28 2014
Hardware Version:	0.3
Web Version:	1.14

Status Information	
Input	
	Input 1 Input 2
Interface:	HDMI SDI
Bitrate:	0.000 Mbps 24.431 Mbps
Output	
	Output
Maxout Bitrate:	65.001 Mbps
Current Bitrate:	24.530 Mbps
TS Overflow:	●

Callouts:

- User can click any item here to enter the corresponding interface to check information or set the parameters.
- It automatically identifies and displays the signal source interface and real-time encoding bit rate of corresponding input channel.
- TS indicators—Green light indicates the TS is normal, which otherwise turns to red.

Figure-2

Input 1

From the menu on left side of the webpage, clicking “Input 1”, it displays the information of the programs (1st & 2^{ed} ones) from the 1st SDI encoding module as Figure-3.

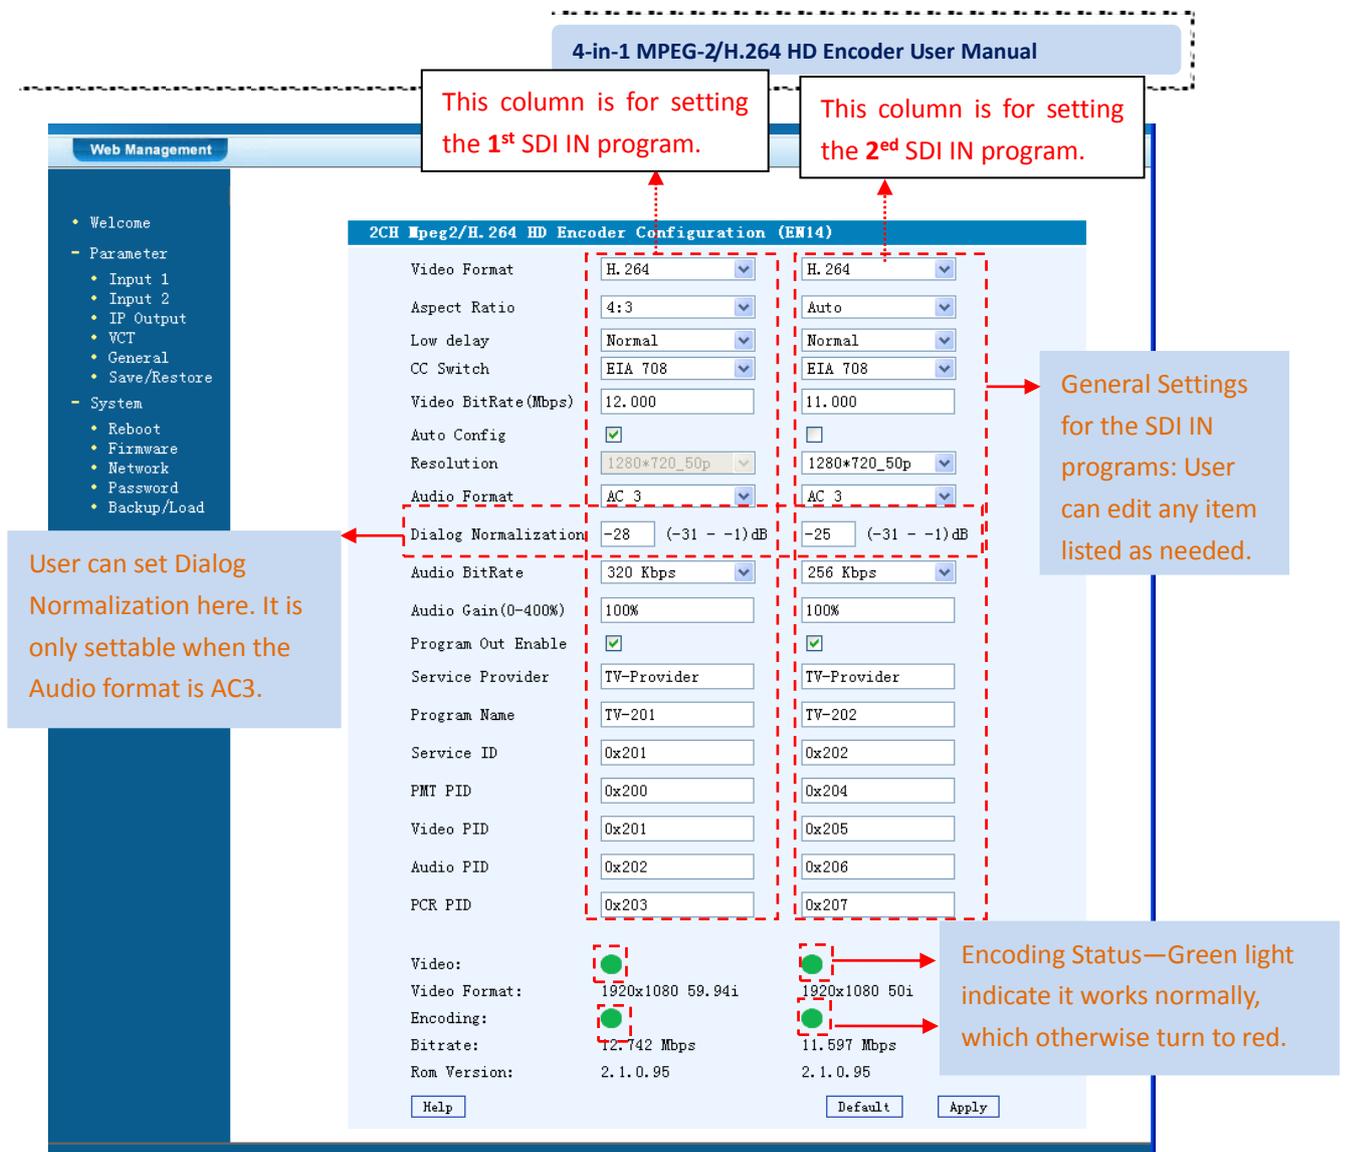


Figure-3

NOTE

The different combination of **Video Format**, **Video Bit-rate**, **Low Delay Mode**, the **Resolution** of signal source and **Decoding solution** adopted on terminal side will have an impact on the latency.

Resolution

User clicks the Auto Config box, the output resolution is the same as input resolution. If not, user can choose output resolution manually, but should keep the scanning form and frame rate (e.g. 50i→50i); and the output resolution should the same or lower than the original. On condition that the manual configuration is wrong, the box will be clicked automatically.

Help

For user to turn to refer detailed explanation of terms on this interface

Default

Click this button to apply the default setting of Input 1

Apply

Click this button to apply the modified parameters.

Input 2

Similarly, from the menu on left side of the webpage, clicking “Input 2”, it displays the information of the programs (3rd & 4th ones) from the 2^{ed} SDI encoding module.

IP Output

Click “IP Output”, it will display the interface where to configure the output IP stream in MPTS or SPTS the as Figure-4.

This device supports 1 MPTS & 4 SPTS IP output. Click the related box to enable the corresponding program to output through IP Channel.

MPTS & 4 SPTS for the 4 programs respectively

To configure the output IP address and ports for the IP Channels respectively.

IP Output Configuration

IP Output: If not set, the following parameters will be no use, the Enable: IP Output will not work.

Service IP: The IP Output port address. The format is xxx.xxx.xxx.xxx (like as 192.168.2.137).

Output IP: The IP Output data receive address. The format is xxx.xxx.xxx.xxx (like as 224.2.2.2). After set the Output IP address, you must use the new address to receive IP Output data.

Subnet Mask: General is 255.255.255.0, it must be the same in a local area network.

Gateway: If the device is in different net segment, you must set the gateway.

Port: [Input field]

Protocol: Turn on/off RTP protocol

IP Output Enable (MABCD):

Filter Null Pkt (MABCD):

MPTS :	224.2.2.3	Port:	22340	Protocol:	UDP	
SPTS A:	224.2.2.3	Port:	22360	Protocol:	UDP	Bitrate: 16.000 (Mbps)
SPTS B:	224.2.2.3	Port:	22380	Protocol:	UDP	Bitrate: 16.000 (Mbps)
SPTS C:	224.2.2.3	Port:	22400	Protocol:	UDP	Bitrate: 16.000 (Mbps)
SPTS D:	224.2.2.3	Port:	22420	Protocol:	UDP	Bitrate: 16.000 (Mbps)

Service IP: 192.168.4.166

Subnet Mask: 255.255.255.0

Gateway: 192.168.2.0

Default Apply

Figure-4

After setting the parameters, click “Apply” to save the setting.

VCT (Virtual Channel Table) Setting

Click “VCT” from the menu to trigger the screen as Figure-5. Then click “Add” from this screen to add the program descriptor in VCT Table.

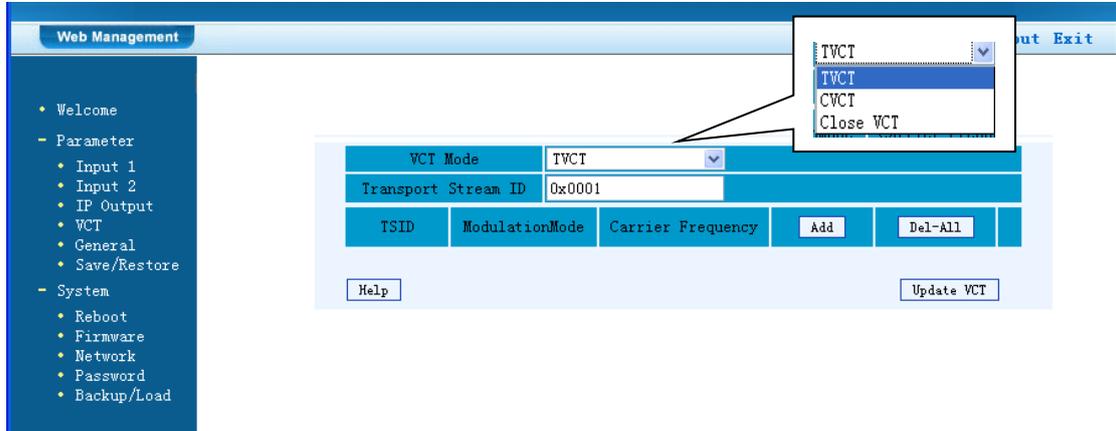


Figure-5

Add

Click “Add” from this page, it will display the screen as below where it requires to add Channel TSID and configure other parameters for the programs.



Add

Here by clicking “Add”, users can set the program VCT in its respective field.

After setting all the data, users need to click on “Save” **Save** to save the setting.

General

Clicking “General” from the menu, it will display the interface as Figure-6 where to set the network info for the output TS.

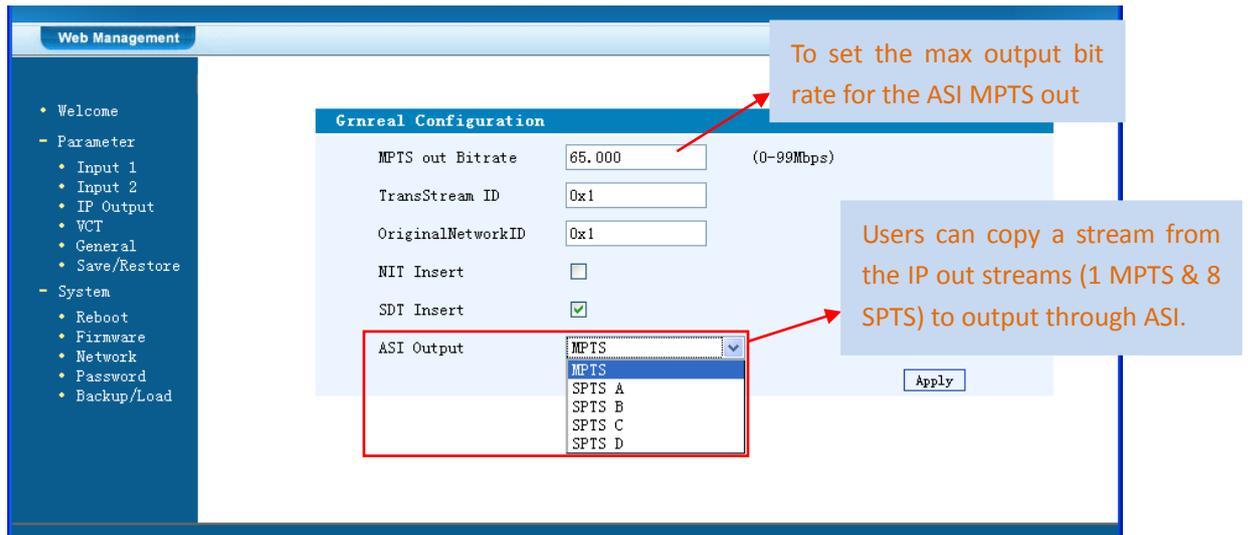


Figure-6

Save/Restore

From the menu on left side of the webpage, clicking “Save/Restore”, it will display the screen as Figure-7 where to save or restore your configurations.

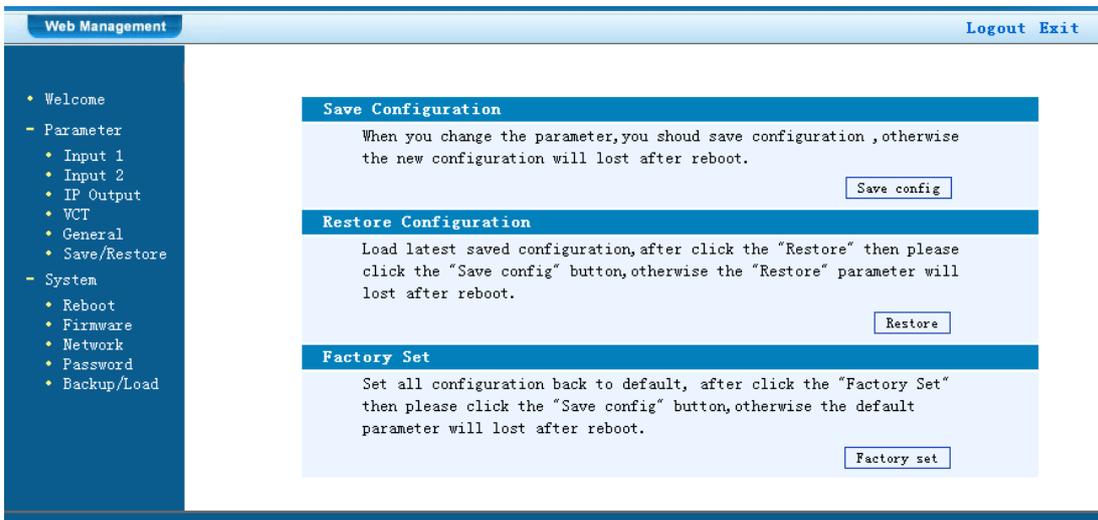


Figure-7

Restart the Device

Click “Reboot” from the menu, the screen will display as Figure-8. Here when clicking “Reboot” box, it will restart the device automatically.

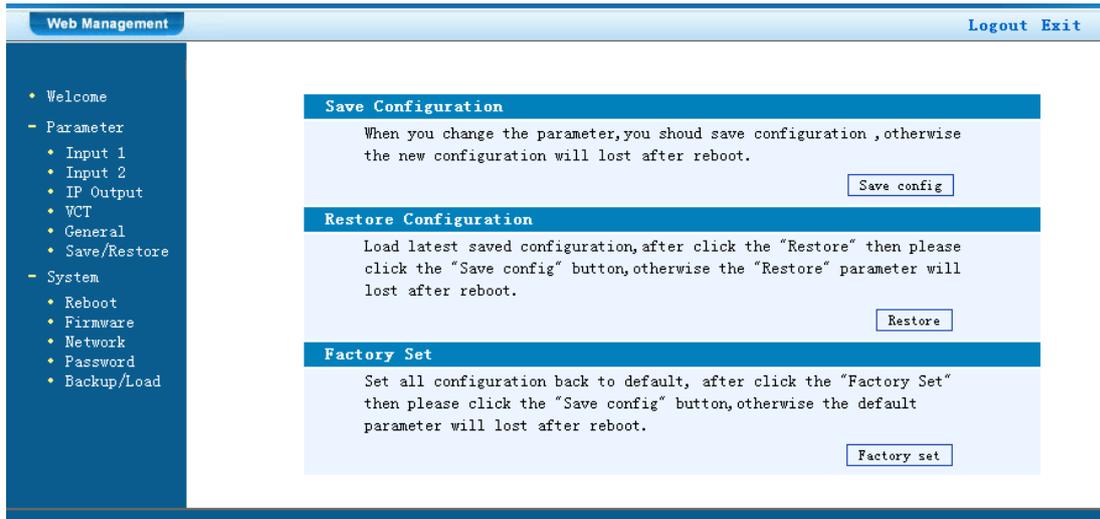


Figure-8

Update the Device

Click "Firmware" from the menu it will display the screen as Figure-9. Here user can update the device by using the update file.

Click "Browse" to find the path of the device update file for this device then click "Update" to update the device.

After updating the device, user needs to restart the device by using Reboot option.

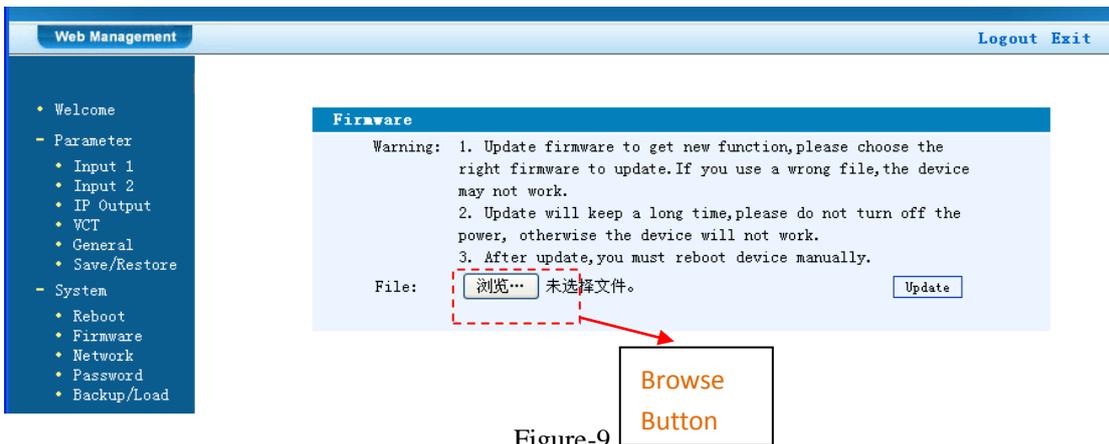


Figure-9

Network

When user clicks "Network", it will display the screen as Figure-10. It displays the network information of the device. Here user can change the device network configuration as needed.

Web Management Logout Exit

- Welcome
- Parameter
 - Input 1
 - Input 2
 - IP Output
 - VCT
 - General
 - Save/Restore
- System
 - Reboot
 - Firmware
 - Network
 - Password
 - Backup/Load

Network

IP Address: The manage address, use this address to visit the manage web. The format is xxx.xxx.xxx.xxx (like 192.168.0.1). After set the IP address, you must use the new address to visit the manage web.

Subnet Mask: General is 255.255.255.0, it is must the same in a local area network.

Gateway: If the device is in different net segment, you must set the gateway.

Web Manage Port: The default web manage port is 80, if you change it (like 8001), you can visit the manage web only use IP address and port (like as http://192.168.0.1:8001). This function will work after device reboot.

IP Address:

Subnet Mask:

Gateway:

Web Manage Port:

Figure-10

Change Password

When user clicks “Password”, it will display the password screen as Figure-11. Here user can change the Username and Password for login to the device.

Web Management Logout Exit

- Welcome
- Parameter
 - Input 1
 - Input 2
 - IP Output
 - VCT
 - General
 - Save/Restore
- System
 - Reboot
 - Firmware
 - Network
 - Password
 - Backup/Load

Password

Modify the login name and password to make the device safely. If forget the name or password, you can reset it by keyboard in menu 5.5. The default login name and password is “admin”. Also please note the capital character and lowercase character.

Current UserName:

Current Password:

New UserName:

New Password:

Confirm New Password:

Keyboard and LCD Lock

Figure-11

Keyboard and LCD Lock

- **Keyboard and LCD Lock:** If it is marked with “√”, the LCD and keyboard will be locked to avoid unrelated users’ modifying or view the device information and configurations. User can’t operate the keyboard & LCD while only the device IP address can be noted in the LCD window.

IP Address
192.168.000.136

Backup/Load

Click “Backup/Load” from the menu, it will display the screen as Figure-12.

Backup Configuration – To back up the device configuration file to a folder

Load Configuration – If user needs to load the old configuration to the device, click “Browse” and find the backup configuration file path. After selecting the file, click “Load File” to load the backup file to the device.

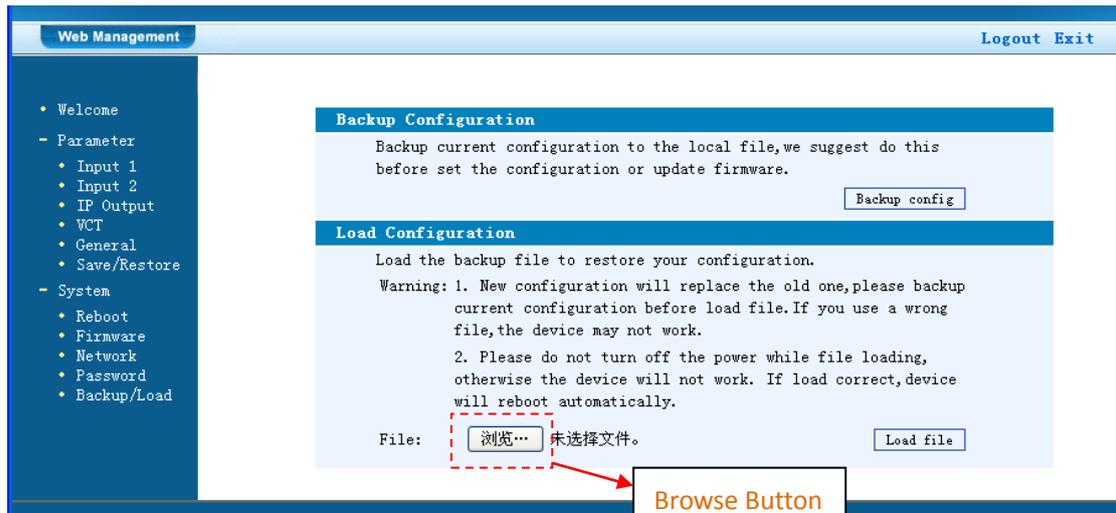


Figure-12

Chapter 5 Troubleshooting

Our ISO9001 quality assurance system has been approved by CQC organization. For guarantee the products' quality, reliability and stability. All our products have been passed the testing and inspection before ship out factory. The testing and inspection scheme already covers all the Optical, Electronic and Mechanical criteria which have been published by our company. To prevent potential hazard, please strictly follow the operation conditions.

Prevention Measure

- Installing the device at the place in which environment temperature between 0 to 45 °C
- Making sure good ventilation for the heat-sink on the rear panel and other heat-sink bores if necessary
- Checking the input AC within the power supply working range and the connection is correct before switching on device
- Checking the RF output level varies within tolerant range if it is necessary
- Checking all signal cables have been properly connected
- Frequently switching on/off device is prohibited; the interval between every switching on/off must greater than 10 seconds.

Conditions need to unplug power cord

- Power cord or socket damaged.
- Any liquid flowed into device.
- Any stuff causes circuit short
- Device in damp environment
- Device was suffered from physical damage
- Longtime idle.
- After switching on and restoring to factory setting, device still cannot work properly.
- Maintenance needed

Chapter 6 Packing List

Encoder	1PC
User Manual	1PC
SDI Cables	4PCs
Power Cord	1PC